

INSTRUCTIONS


Always clean up spills according to Local, State and Federal regulations.

Pads & Booms

Place **pads** directly on spill.



Place **boom** across water to prevent spill from spreading.

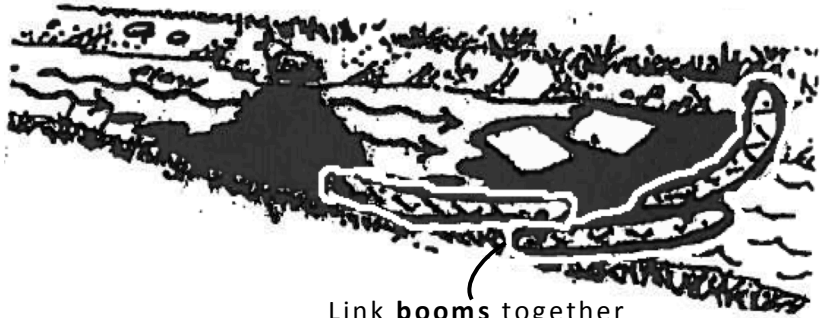


Place **booms** to prevent spill from spreading.

Link **booms** together using built in links.

Link **booms** together using built in links.

Sweeps

Place **pads** on spill.

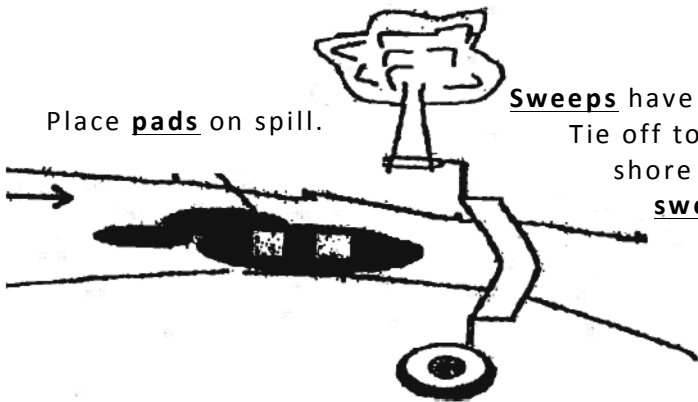

Sweeps have ties on each end. Tie off to secure object on shore or dock. If longer **sweep** is needed, tie **sweeps** together with rope.


1. **Safety first** – personal safety. Know and use the correct safety clothing and equipment before attempting to clean up spill.
2. **Policy** – know and understand your company policies regarding spills.
3. **Oil products** – **WHITE** absorbents will float on water, absorbing hydrocarbons and petrochemicals.
4. **Universal products** – **GREY** absorbents will soak up most any liquids.
5. **Replace** your absorbents and spill kits.

Granular / Loose Absorbent


Spread loose **sorbent** over spill.



Use a **sock** or **boom** to wrap around spill and prevent further spilling.

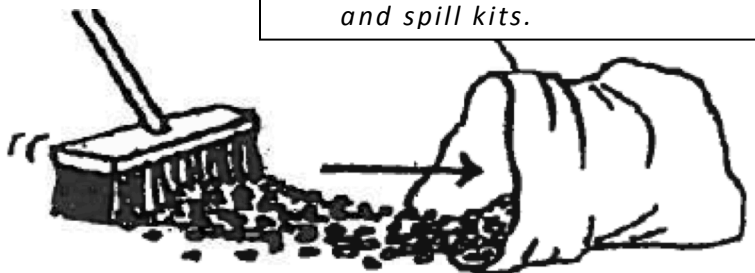

Clean up with broom.

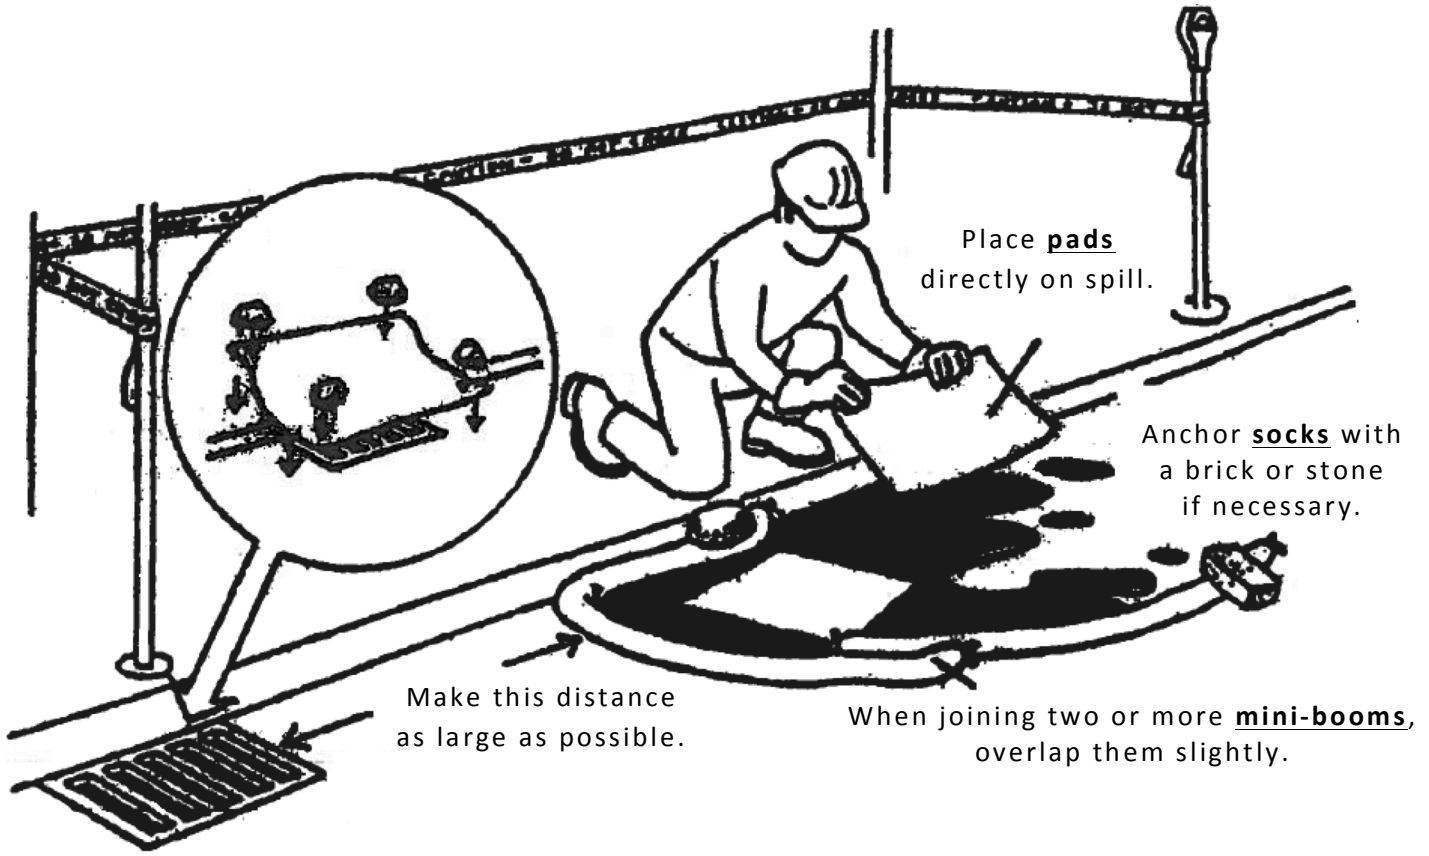


Place pads directly on spill.

Anchor socks with a brick or stone if necessary.

Make this distance as large as possible.


When joining two or more mini-booms, overlap them slightly.

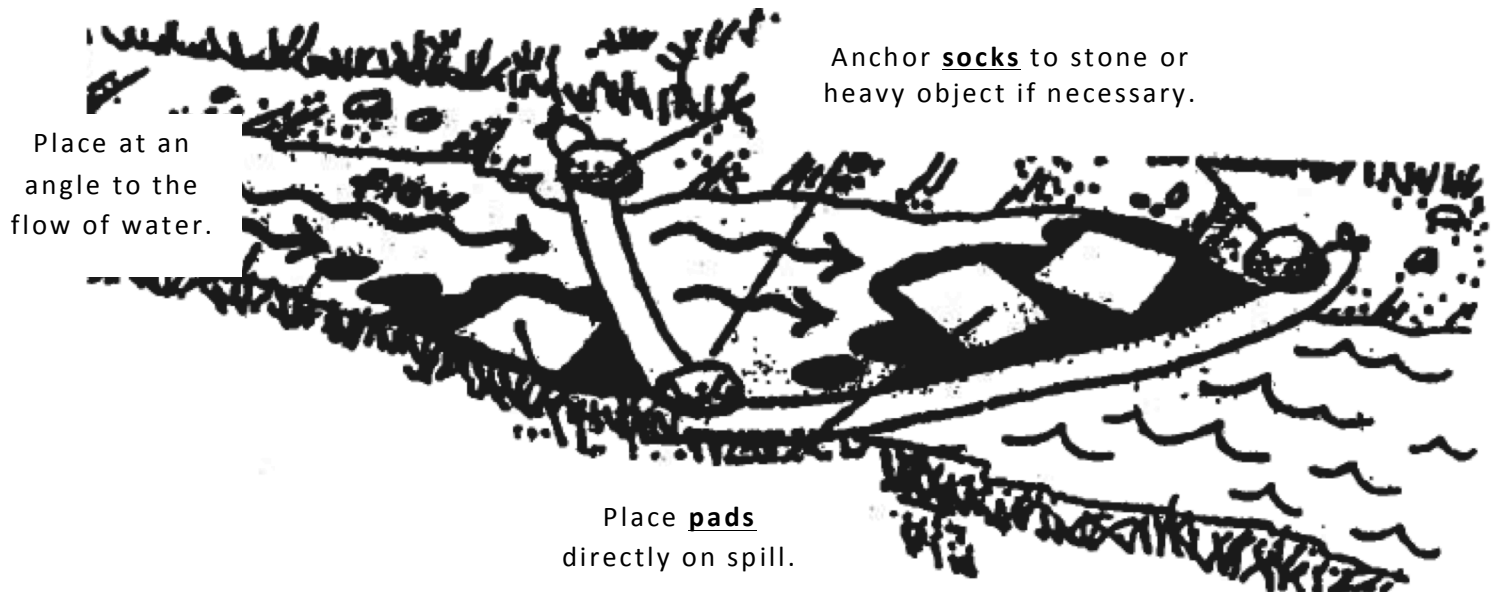


Place at an angle to the flow of water.

Anchor socks to stone or heavy object if necessary.

Place pads directly on spill.

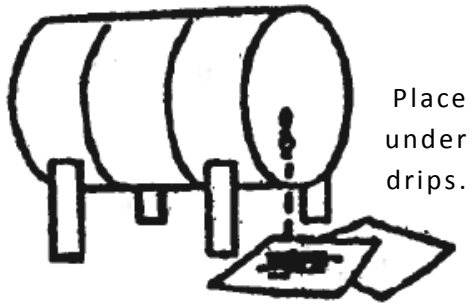

Place under drips.

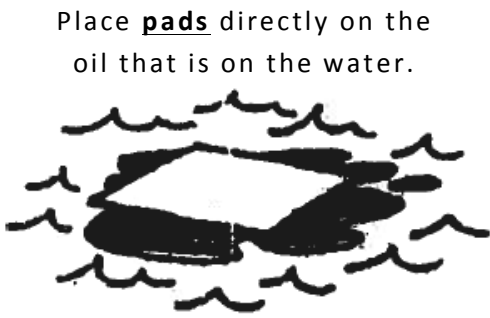

Place pads directly on the oil that is on the water.



Use as a final wipe down.